





ROUND SAMPLE PUNCH PNEUMATIC

Code N17100

Pneumatic sample punches for the preparation of 100 cm² round samples (or smaller)

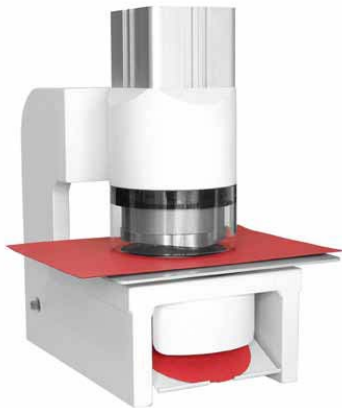

Model without footswitch

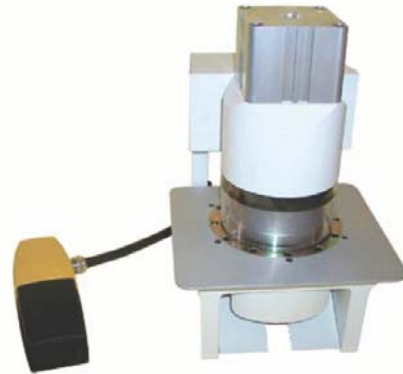

Model with footswitch

PTA SPAIN

C/ Gurutzegi N° 16 Pol. Belartza
20018 SAN SEBASTIÁN
(Guipúzcoa) - Spain

PTA FRANCE

14, rue Evariste Galois / ZAC les Ruieres
38320 EYBENS - France

PTA ASIA

50 East Coast Road #02-73 Roxy Square
428769 SINGAPORE - Singapore



DEVICE DESCRIPTION :

The pneumatic round sample punch consists of a serrated upper blade and a die, through which the sample is expelled downward. For easy removal of the punched sample, a sample slide is mounted on the punch. An acrylic glass safety guard is attached around the punch blade. The round sample punch is available with either a hand or foot switch.

PROCESS DESCRIPTION :

The sample is placed in the punch. The hand or foot switch is used to send the upper blade through the die. The punched sample falls to the sample slide and can then be removed.

OPTION :

Foot switch

MODELS :

- ✓ Punching size 100 cm² for tissue, paper or board
- ✓ Punching size 50 cm² for tissue, paper or board
- ✓ Punching size 10 cm² for tissue, paper or board

PTA SPAIN

C/ Gurutzegi N° 16 Pol. Belartza
20018 SAN SEBASTIÁN
(Guipúzcoa) - Spain

PTA FRANCE

14, rue Evariste Galois / ZAC les Ruieres
38320 EYBENS - France

PTA ASIA

50 East Coast Road #02-73 Roxy Square
428769 SINGAPORE - Singapore



PAPER TESTING ASSOCIATION

LABORATORY Testing Equipment



CONNECTIONS :

Compressed air : approx. 600 kPa

WEIGHT AND DIMENSIONS (ONLY EQUIPMENT) :

350 x 200 x 390 mm (WxDxH) / 37 Kg

WEIGHT AND DIMENSIONS WITH PACKING BOX :

500 x 500 x 700 mm (WxDxH) / 48 Kg

PTA SPAIN

C/ Gurutzegi N° 16 Pol. Belartza
20018 SAN SEBASTIÁN
(Guipúzcoa) - Spain

PTA FRANCE

14, rue Evariste Galois / ZAC les Ruieres
38320 EYBENS - France

PTA ASIA

50 East Coast Road #02-73 Roxy Square
428769 SINGAPORE - Singapore

info@ptagroup.com

www.ptagroup.com